

1-Fiber Detachable DVI module, DVFX-110

User's Manual



Manual Contents

| | |
|---|-----|
| Manual Contents | 1-0 |
| Welcome! Product Description | 1-1 |
| System Requirements for Setup | 1-2 |
| Installation | 1-3 |
| Self-EDID Programming Procedure | 1-4 |
| Troubleshooting, Maintenance, Technical Support | 1-5 |
| Product Specifications | 1-6 |
| Warranty Information | 1-7 |
| Regulatory Statements | 1-8 |

Pictorials

| | |
|---|-----|
| Figure 1 – Connection Diagram of Optical DVI | |
| Extension Modules | 1-1 |
| Figure 2 – Connection of power adapter to the transmitter and receiver | 1-3 |
| Figure 3 – Connection of optical fiber | 1-3 |
| Figure 4 – Connection of the transmitter to DVI source and receiver to the display | 1-4 |
| Figure 5 – Connection diagram using optical splitter | 1-4 |
| Figure 6 – Position of EDID-PRG. Button and Status LED | 1-5 |

Welcome!

Congratulations on your purchase of the **Stretch DVI™ DVFX-110-TR** Optical DVI (Digital Visual Interface) Extension Module. This manual contains information that will assist you in installing and operating the product.

Product Description

The **DVFX-110-TR** optical DVI module transmits four (4) optical data, Red, Green, Blue and clock and can be extended up to 1,000 meters (4920ft) over one (1) SC single or multi-mode fiber at WUXGA (1920x1200), 60Hz vertical refresh rate. The EDID (Extended Display Identification Data) in a display can be read and restored by just plugging once transmitter to the display. This **Self-EDID programming** feature makes the installation of DVFX-110-TR more easy and flexible at any variable resolution display systems. The key features of **DVFX-110-TR** is, by using an optical splitter (OPS-116S), one (1) signal from transmitter can be copied up to sixteen (16) times and it gives you a cost effective and space saving installation for various application. For your convenience, UXGA EDID would have been done before shipment as a default.

Shipping Group

- ❑ **DVFX-110-TR Optical DVI Extension Module:** One (1) pair
- ❑ **AC/DC power adapter:** Two (2) units of +5V, 2A
- ❑ **User's Manual**
- ❑ **Option Product:** Simplex SC Patch Cord (Single or Multi-mode fiber)

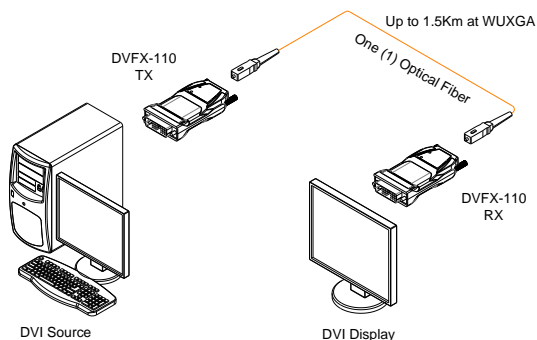


Figure 1 – Connection Diagram of Optical DVI Extension Module

System Requirements for Setup

❑ Hardware requirements

- You have to have a DVI graphic controller or card having a DVI port in your PC, SUN or Mac systems. It should support the maximum graphic resolution feature of displays to be connected.
- No special requirements for memory size, CPU speed and chipsets, if you've already properly installed your DVI graphic controllers or cards.

❑ Software requirements

- No special restrictions, if you've already properly installed your DVI graphic controller in your OS.

❑ AC/DC Power Adapter Technical Advisory

The transmitter (Tx) module of DVFX-110-TR is designed for power protection circuit from conflict of power supply between the external AC/DC power adapter and your DVI source by #14 pin.

We strongly recommend to use external AC/DC adapter for Transmitter (Tx) for stable power supplying. In case of Receiver (Rx), power should be supplied by AC/DC adapter due to no internal power supplying from the displays.

Installation

Important: Please keep the installation procedure below. Improper or no operation may result if the start-up sequence is not correctly followed.

Step 1

Carefully unpack the contents of the shipping group.

Step 2

Plug the 5V power adapters to the power jack of the transmitter and receiver. Ensure the Power LED ON (Green) and Status LED blinking slowly (Green).

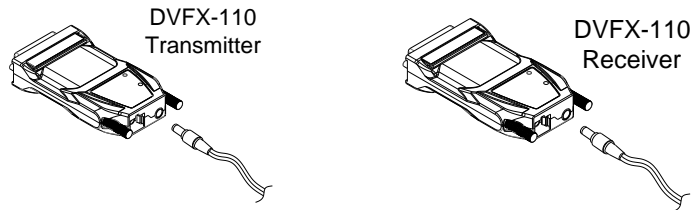


Figure 2 – Connection of power adapter to the transmitter and receiver

Step 3

Please, check if the maximum resolution of the display is UXGA (1600x1200). Otherwise, follow the instructions for **Self-EDID Programming Procedure** on page 1-5.

Step 4

Connect SC optical fiber between the transmitter and the receiver as shown in figure 3.

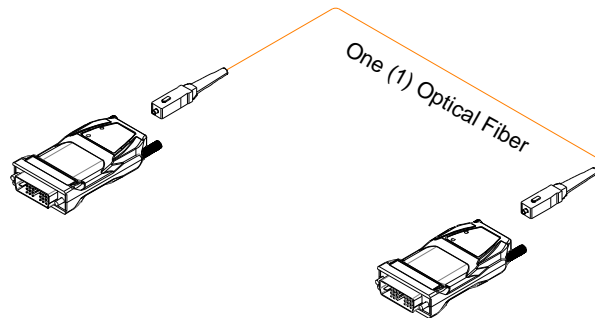


Figure 3 – Connection of optical fiber

Note: Both single and multi-mode fibers are applicable to DVFX-110-TR. The maximum extension length by single mode fiber is 1,000meters and 500meters by multi-mode.

1-3 Installation

Step 5

Plug the transmitter to the DVI receptacle of the DVI source such as PC and the receiver to the DVI receptacle of the display.

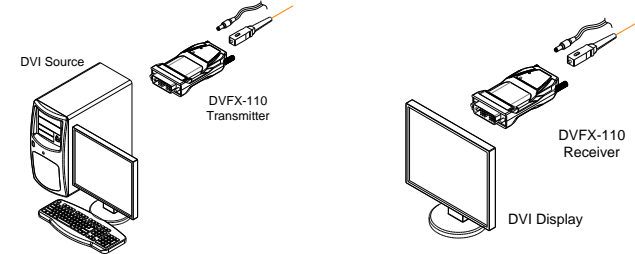


Figure 4 – Connection of the transmitter to the DVI source and receiver to the display

Note: Be recommended NOT to use any intermediate cable or adapter between them to avoid undesirable performance degradation.

Step 6

Make the PC and the display power ON. And ensure that the Status LED in transmitter and receiver turn on.

By using an optical splitter OPS-xyz, one (1) signal from **DVFX-110** transmitter can be copied up to sixteen (16) times as shown in figure 5. For more information, please refer to user's manual of OPSR-2, OPX-xyz.

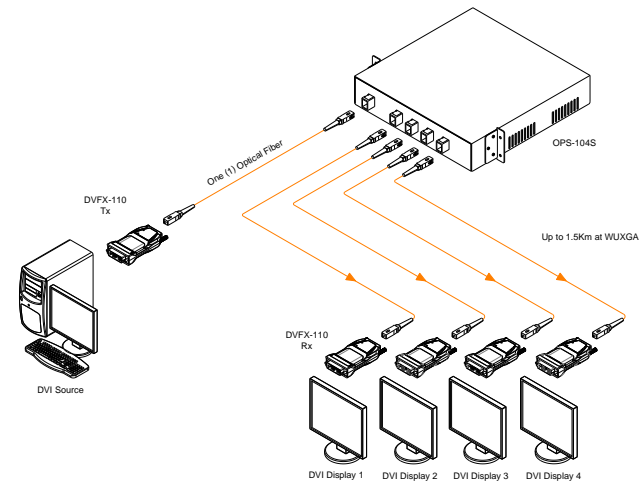


Figure 5 – Connection diagram using optical splitter, OPS-104S

Note: The maximum extension length can be shortened by using optical splitter and additional fibers. The single-mode fiber is only applicable to OPS-xyz.

1-4 Installation

Self-EDID Programming Procedure

The graphic source equipment generally requires display information (EDID). It contains resolution and timing information of the display.

DVFX-110-TR supports Self-EDID programming. It is the procedure that reads the EDID from the display and stores it in the EEPROM of the transmitter. You have to do Self-EDID programming if the maximum resolution of the user's display is not UXGA (1600x1200). Follow the steps below to do it correctly.

Note1: If you know that EDID is not required by the user's DVI source, Self-EDID programming is not necessary.

Note2: The default EDID in factory ship-out is programmed in the VESA standard of UXGA (1600x1200), 60Hz.

Step 1

Power on the display.

Step 2

Plug the 5V power adapter to the power jack of the transmitter of DVFX-110. Ensure the Power LED ON and Status LED blinking slowly.

Step 3

Push the EDID PRGM. button of the transmitter with a narrow pin. Then, status LED will be turned off.

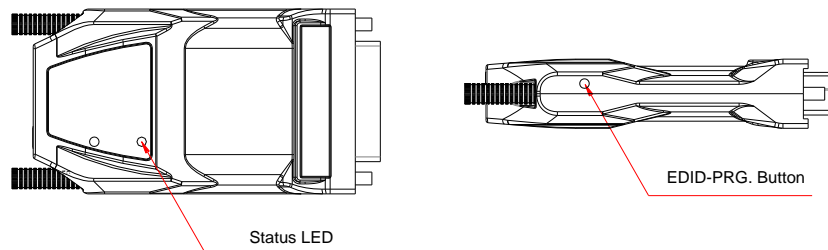


Figure 6 – Position of EDID-PRGM. button and Status LED

Step 4

Connect the transmitter to the display not to the PC. Then the status LED will begin to blink rapidly. It indicates reading the EDID from the display and storing it in the EEPROM. After 7~8 sec, the status LED blink slowly and it indicates completion of all procedure.

Step 5

Disconnect the transmitter from the display.

1-5 Self-EDID Programming Procedure

Troubleshooting

The display shows only black screen.

- Ensure that all plugs and jacks used by external power supplies (both Opticis and others) are firmly connected. Ensure that the Power and status LED ON.
- Ensure that the DVI ports are firmly plugged in to the PC and display.
- Ensure that the transmitter and receiver modules plugged correctly to the PC and display, respectively.
- Check if the PC and display are powered on and properly booted.
- Reset the system by de-plugging and re-plugging the transmitter DVI port or receiver DVI port, or by de-plugging and re-plugging the power plugs of transmitter and receiver modules.
- Re-boot up the system while connecting the optical DVI extension module.

Screen is distorted or displays noises.

- Check if the graphic resolution is properly set. Go to the display properties of Windows and tap the settings.
- Ensure that the resolution sets less than WUXGA (1920x1200) at 60Hz refresh ratio.
- Reset the system. Disconnect and reconnect the optical DVI cables or 5V power adapters.

Maintenance

No special maintenance is required for the optical DVI module and power adapters. Ensure that the DVI modules and power adapters are stored or used in a benign environment free from liquid or dirt contamination.

There are no user serviceable parts. Refer all service and repair issues to Opticis.

Technical Support and Service

For commercial or general product support, contact your reseller. For technical service, contact Opticis by email techsupp@opticis.com or visit its website at www.opticis.com

1-6 Troubleshooting, Maintenance, Technical Support

Product Specifications

DVFX-110-TR Optical DVI Extension Modules

- ❑ **Compliance with DVI standard:** Supports DVI1.0, fully implemented by fiber-optic communication and DDC2B by virtual DDC.
- ❑ **Extension limit:** 1,000meters (4920feet) for WUXGA (1920x1200) at 60Hz refresh rate.

| Fiber Type | Extension Length at WUXGA |
|-------------------|---------------------------|
| Multi-mode Fiber | 500meters |
| Single-mode Fiber | 1,000meters |

- ❑ **Graphic transmission bandwidth:** Supports up to WUXGA, 60Hz, or 1.65Gbps bandwidth per graphic channel.
- ❑ **Supporting resolution (Based on DVI input)**
HDTV) 480p, 576p, 720p, 1080p
VESA) VGA, SVGA, XGA, WXGA, SXGA, SXGA+, WXGA+, UXGA, WSXGA+, WUXGA
- ❑ **Fiber-optic connection:** The transmitter and receiver modules of DVFX-110 have one (1) SC receptacles so as to be connected with one (1) SC simplex single or multi-mode fibers, having 9(8)/125µm or 62.5(50)/125µm core.
- ❑ **DDC connection:** Virtual DDC by Self-EDID programming.
- ❑ **Mechanical specifications of transmitter and receiver modules**
 - **Dimensions:** 39mm x 14.6mm x 68mm (W/H/D)
- ❑ **Environmental Specifications**
 - Operating temperature: 0°C to 50°C
 - Storage temperature: - 10°C to 85°C
 - Humidity: 5% to 85%

AC/DC Power Adapter

- ❑ **Power Input:** AC 100-240V, 50/60Hz 0.1A
- ❑ **Power Output:** +5 V, 2A SMPS DC-power Adapter
- ❑ **Cord DC Jack:** Core is 5 V and outer is GND.

1-7 Product Specifications

Warranty Information

1 (One) Year Warranty

Opticis warrants this optical DVI extension module to be free from defects in workmanship and materials, under normal use and service, for a period of one (1) year from the date of purchase from Opticis or its authorized resellers.

If a product does not work as warranted during the applicable warranty period, Opticis shall, at its option and expense, repair the defective product or part, deliver to customer an equivalent product or part to replace the defective item, or refund to customer the purchase price paid for the defective product.

All products that are replaced will become the property of Opticis.

Replacement products may be new or reconditioned.

Any replaced or repaired product or part has a ninety (90) day warranty or the reminder of the initial warranty period, whichever is longer.

Opticis shall not be responsible for any software, firmware, information, or memory data of customer contained in, stored on, or integrated with any products returned to Opticis for repair under warranty or not.

Warranty Limitation and Exclusion

Opticis shall have no further obligation under the foregoing limited warranty if the product has been damaged due to abuse, misuse, neglect, accident, unusual physical or electrical stress, unauthorized modifications, tampering, alterations, or service other than by Opticis or its authorized agents, causes other than from ordinary use or failure to properly use the product in the application for which said product is intended.

Dispose of Old Electrical & Electronic Equipment

(Applicable in the European Union and other European countries with separate systems)



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

1-8 Warranty Information

UL/EN Statement

This equipment has been tested and found to comply with the limits for medical devices in UL/EN 60601-1, 60601-1-2 and FCC/CE. These limits are designed to provide reasonable protection against harmful interference in a typical medical installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to other devices in the vicinity. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to other devices, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving device.
- Increase the separation between the equipment.
- Connect the equipment into an outlet on a circuit different from that to which the other device(s) are connected.
- Consult the manufacturer or field service technician for help.
- Type of protection against electric shock: Class I equipment
- Degree of protection against electric shock: Not classified - no applied parts
- Classification according to the degree of protection against ingress of water as detailed in the current edition of IEC 529: IPX0, ordinary equipment
- This equipment is not suitable for use in the presence of flammable anesthetics or oxygen
- Mode of operation: continuous operation

Certification of Eye Safety

This laser product is inside implemented by using 1310/1550nm optical module, manufactured by Opticis Co., Ltd., which are all certified by UL/EN 60601-1, 60601-1-2 referred in Accession Number 07-1334-0217 as classified in Class1 LASER eye safety.



1-9 Regulatory Statements

© 2011 Opticis Co., Ltd. All Rights Reserved
Revision 1.1, Jun. 27, 2011

Opticis Locations

Headquarters

Opticis Co., Ltd.

#907, Byucksan Technopia, 434-6
Sangdaewon-Dong, Chungwon-Gu,
Sunghnam City, Gyeonggi-Do, 462-716
South Korea

Tel: +82 (31) 737-8033~8

Fax: +82 (31) 737-8079

www.opticis.com

For order support, please contact your Distributor or Reseller.

For technical support, check with the Opticis web site www.opticis.com or contact techsupp@opticis.com